


**ELENCO PEZZI DI RICAMBIO
LISTE PIECES DETACHEES
SPARE PARTS LIST
ERSATZTEILLISTE
PIEZAS DE REPUESTO**

**DYNAMIC 320 START
DYNAMIC 420 START**



TELWIN®

Esploro macchina, Dessin appareil, Machine drawing, Explosions Zeichnung des Geräts, Diseño seccionado maquina.

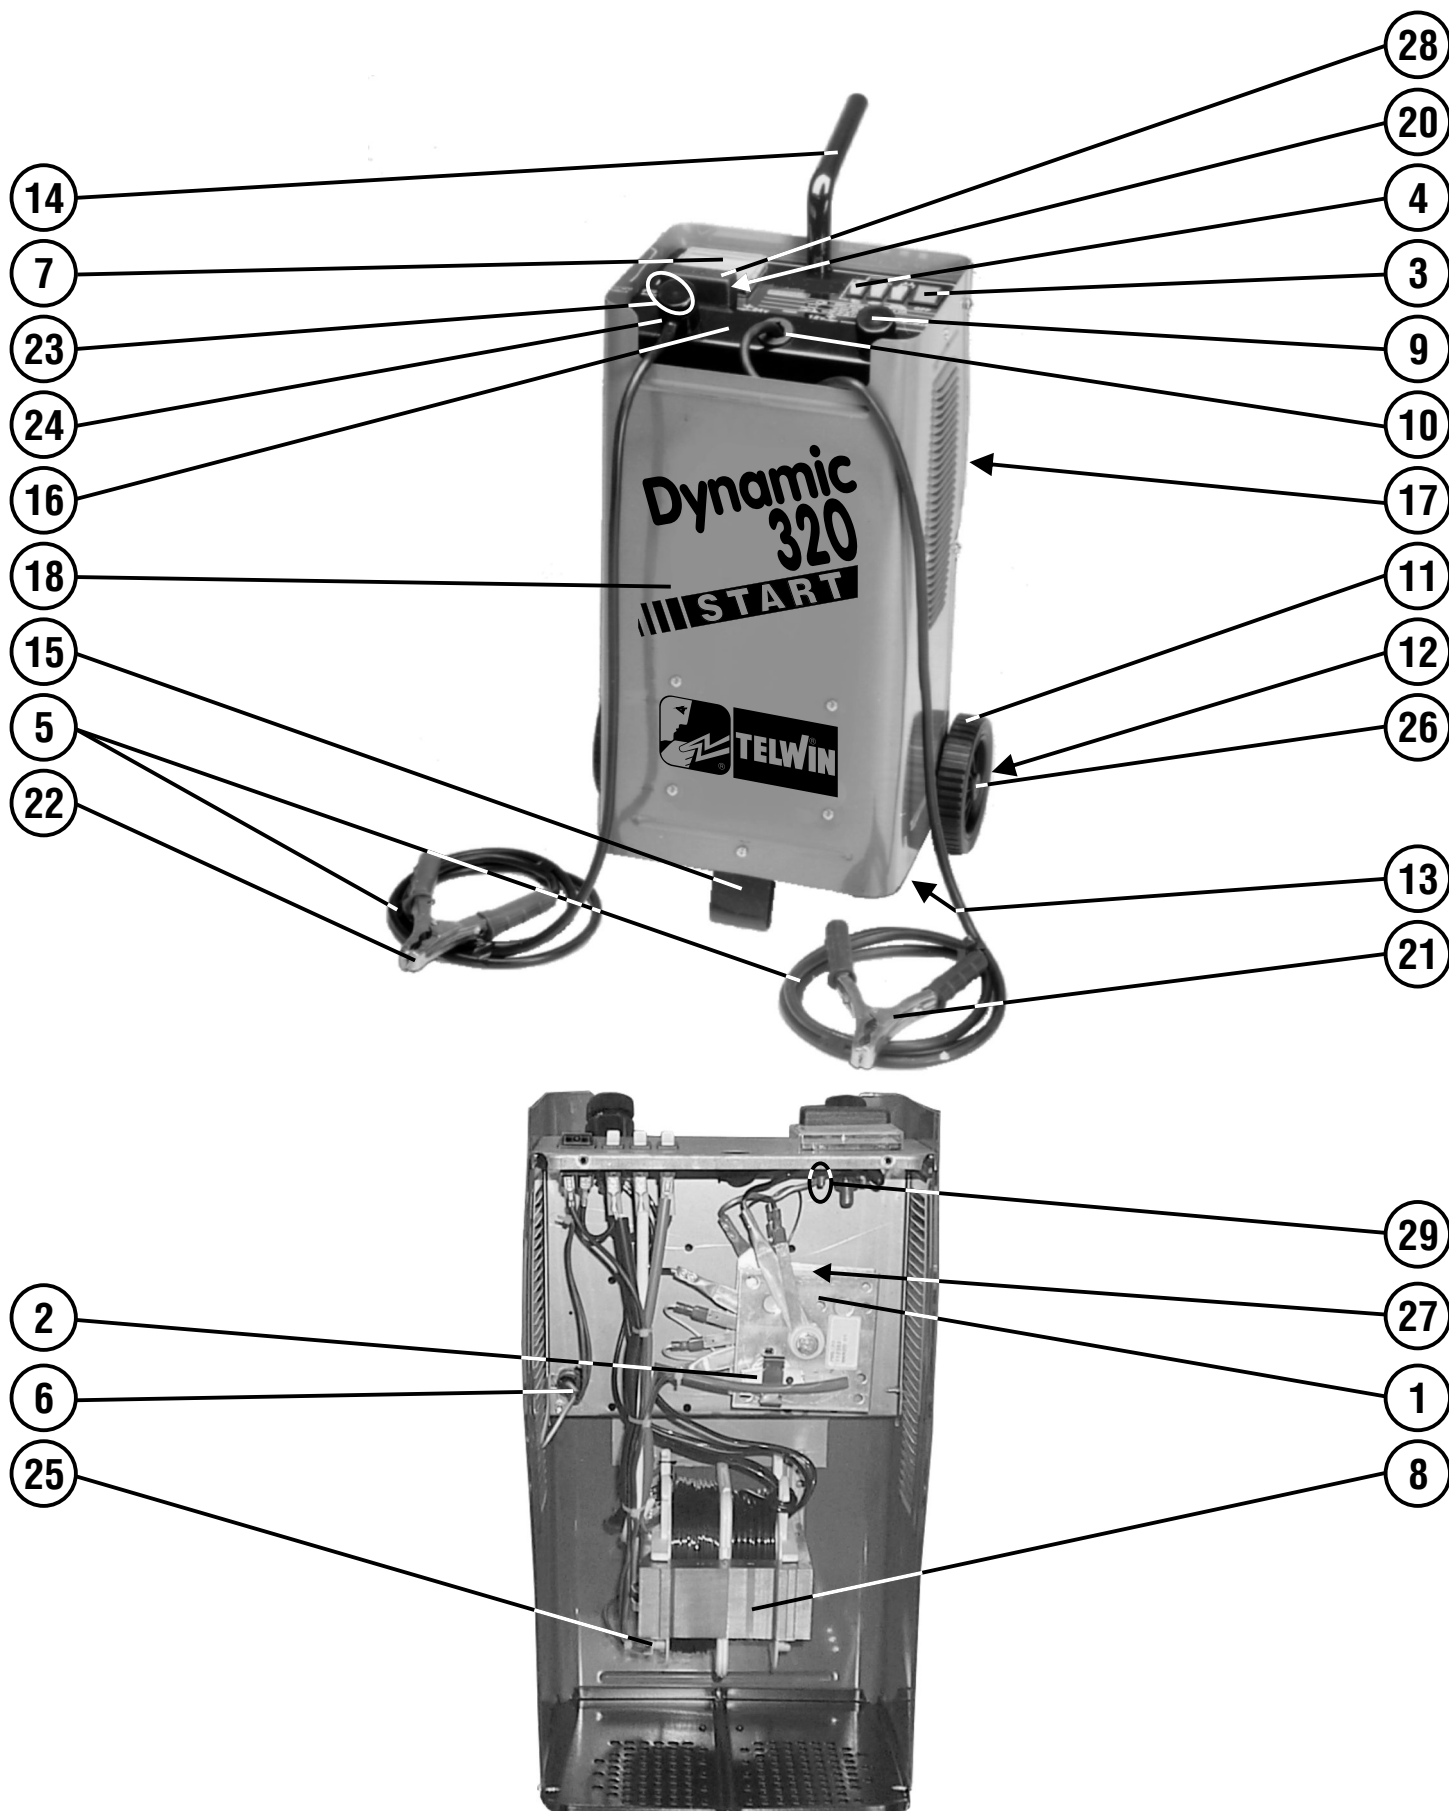

REF.	ELENCO PEZZI DI RICAMBIO PIECES DETACHEES SPARE PARTS LIST ERSATZTEILLISTE PIEZAS DE REPUESTO	DYNAMIC 320 START	DYNAMIC 420 START
		CODE CODICE CODE	CODE CODICE CODE
1	Raddrizzatore Redresseur Rectifier Gleichrichter Rectificador	990685	990901
2	Termostato Thermostat Thermostat Thermostat Termostato	122308	121021
3	Interruttore Interrupteur Switch Schalter Interruptor	122477	122381
4	Deviatore Commutateur Switch Schalter Commutador	122400	122400
5	Cavo Cable Cable Kabel Cable	123425	123434
6	Cavo Alim. Cable Alim. Mains Cable Netzkabel Cable Alim. M	132310	132193
7	Amperometro Amperemètre Ammeter Amperemeter Amperemeter	152020	152248
8	Trasformatore Transformateur Transformer Transformator Transformador	169140	169331
9	Volantino Volant Handwheel Handrad Volante	312053	312053
10	Pressacavo Presse Cable Cable Bushing Kabelhalter Prensa Cable	322112	322112

REF.	ELENCO PEZZI DI RICAMBIO PIECES DETACHEES SPARE PARTS LIST ERSATZTEILLISTE PIEZAS DE REPUESTO	DYNAMIC 320 START	DYNAMIC 420 START
		CODE CODICE CODE	CODE CODICE CODE
11	Ruota Roue Wheel Rad Rueda	322193	322193
12	Asse Per Ruote Axes Pour Roue Wheels Axle Raederachse Eje Por Rueda	422961	422961
13	Fondalino Chassis Bottom Boden Fondo	644177	644177
14	Manico Poignee Handle Handgriff Manija	645076	645076
15	Piedino Embouts Foot Fuss Pie	644402	644402
16	Cruscotto Tableau Dashboard Schaltbrett Cuadro	649175	649209
17	Retro Partie Arriere Back Panel Rückseite Parte Trasera	650098	650098
18	Kit Frontale Kit Partie Frontal Kit Front Panel Kit Gerätefront Kit Frontal	990653	990772
20	Kit 20 Fusibili Kit 20 Fusibles Kit 20 Fuses Kit 20 Sicherungen Kit 20 Fusibles	802259	802260
21	Pinza Di Massa Pince De Masse Work Clamp Masseklemme Pinza De Masa	712001	712001

REF.	ELENCO PEZZI DI RICAMBIO PIECES DETACHEES SPARE PARTS LIST ERSATZTEILLISTE PIEZAS DE REPUESTO	DYNAMIC 320 START	DYNAMIC 420 START
		CODE CODICE CODE	CODE CODICE CODE
22	Pinza Positivo Pince Positiv Positive Clamp Positive Zange Pinza Positivo	712002	712002
23	Kit Morsetto Completo Kit Borne Complete Kit Complete Clamp Kit Komplette Klemme Kit Borne Completo	990162	990162
24	Kit Coppia Rondelle Isolanti Kit Rondelles Isolantes Insulating Washers Kit Isolierscheibekit Kit Arandelas Asladoras	990163	990163
25	Termostato Thermostat Thermostat Thermostat Termostato	121069	122900
26	Tappo Blocca Ruota Bouchon Ferme Roue Wheel Locking Ring Radsperrestopfen Tapon De Bloqueo Rueda	322223	322223
27	Protezione Raddrizzatore Protection Redresseur Rectifier Protection Gleichrichterschutz Proteccion Rectificador	112185	112183
28	Cuffia Per Fusibili Couvre Fusibles Fuse Cover Kasten Fuer Sicherungen Cubrefusible	322051	322051
29	Morsetto Per Fusibile Borne Pour Fusible Fuse Holder Clamp Sicherungshalter Klemme Bocadillo Para Fusible	980036	980036

Schema elettrico, Schéma électrique, Diagram, Schaltplan, Esquema de conexiones.

